


## **Product Safety Guide**

Soft Tronics bvba, trading under the mark FigureBelle, SA Jeurissenlaan 1033, 3520 Zonhoven, Belgium

Please read this booklet before attempting to operate the machine, or before attempting any maintenance. Failure to follow these instructions may result in an increased risk of fire, electrical shock, burns or suffocation. FigureBelle shall not be liable for damage caused where the product owner has failed to follow instructions set out in this guide.

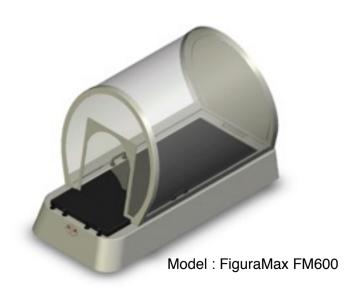

### How to use this guide:

- 1. Read the whole guide before using your machine and keep it for later reference.
- 2. Carefully follow the instructions set out in this guide and always ensure that you follow all warnings and instructions marked on the product.
- 3. If you have concerns about how to use your machine having read this guide, please refer to your local FigureBelle dealer or the FigureBelle Customer Service.
- 4. To ensure you understand all of the instructions, study the Symbols and Conventions used in the documentation below.

## Symbols and conventions used in the documentation

The following symbols and conventions are used throughout the documentation.



## WARNING

WARNING indicates a potentially hazardous situation which, if not avoided, could result in death or serious injuries.



# **A** CAUTION

CAUTION indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injuries.



#### **IMPORTANT**

IMPORTANT indicates a potentially hazardous situation which, if not avoided, may result in damage to property or loss of product functionality.



Prohibition icons indicate actions that must not be performed.



This icon indicates that flammable sprays may not be used.



This icon indicates that organic solvents such as alcohol and liquids may not be used.



Electrical Hazard icons alert you to possible electrical shocks.



Fire Hazard icons alert you to the possibility of fire.



Notes tell you how you should respond to a situation that may arise or give tips about how the operation works with other features.

Follow all warnings and instructions marked on the machine.

#### **Compilation and Publication Notice**

This manual has been compiled and published to provide the latest product safety information at the time of publication. The information contained in this manual may be subject to change. For the latest manual, please contact FigureBelle.com

#### Choose a safe location for your machine

Put your machine on the floor. It should be flat and stable, free from shocks and vibrations. Put the machine near a standard grounded electrical socket. Choose a dry, well ventilated location where the temperature remains between 0 C and 40 C.

This machine is for indoor use only.

## WARNING





DO NOT expose the machine to excessive heat, open flames, corrosive gasses, moisture or dust.





DO NOT place the machine near air conditioners, water, chemicals or devices that contain magnets or generate magnetic fields. Doing so may create the risk of a short circuit or fire should water come into contact with the machine (including condensation from heating, air conditioning, and/or ventilation equipment that may be sufficient to create a short circuit or fire). Magnetic fields could disturb the save operation of the machine.





DO NOT place the product near chemicals or in a place where chemical spillage could occur. In particular, organic solvents or liquids may cause the casing and/or cables to melt or dissolve. risking fire or electric shock. They may also cause the product to become discoloured or less transparent.



Slots in the rear side of the machine are provided for ventilation. Keep the slots open at any time. Blocking the machine's ventilation slots could create a risk of overheating and/or fire.

#### CAUTION

Make sure that no part of the machine protrudes from the floor or stand where the machine is located. Failure to observe these precautions could cause the machine to fall, causing injury to people who are in or under the machine.



#### **IMPORTANT**

- The machine is scratch sensitive and the transparent PETG is breakable. Do not place anything on the machine.
- DO NOT place your machine next to sources of interference. such as speakers, the base units of cordless telephones or any other emitting device. Doing so may interfere with the operation of the machine's electronic components.
- Always place the machine on the ground floor and a solid, flat surface.
- DO NOT enclose this machine.

#### General precautions



#### WARNING

Plastic bubble foil and stretch foils are used in the packing of your machine. To avoid danger of suffocation, keep the plastic packing materials away from babies and children.





Never insert any objects into the ventilation slots or into the nozzle of the heating device of the machine, since they may touch dangerous voltage points or short out parts resulting in the risk of fire or electric shock. If metal objects, water or other liquids get inside the machine, immediately unplug the machine from the electrical socket. Call your FigureBelle dealer or FigureBelle Customer Service.





Never insert any objects into the nozzle of the heating device of the machine, since they may touch dangerous voltage points or short out parts resulting in the risk of fire or electric shock. If metal objects, water or other liquids get inside the machine, immediately unplug the machine from the electrical socket. Call your FigureBelle dealer or FigureBelle Customer Service.



Never cover the heating device of the machine by any objects. Doing so may cause fire and/or permanent damage to the heating device.







DO NOT use flammable substances, any type of spray, or an organic solvent/liquid that contains alcohol or ammonia to clean the inside or outside of the machine. Doing this may cause a fire or electrical shock.





DO NOT disassemble or modify the machine, otherwise fire or electric shock may result. If the machine requires repair, contact your FigureBelle dealer or FigureBelle Customer Service.

## CAUTION


- Make sure no one is in or near the machine when lifting or lowering the dome. Always lift and lower the dome in a way that nobody, including yourself, can get hurt or injured.
- If your machine has the option of automatically lifting and lowering the dome, make sure nobody touches the chains or the chain opening while operating the dome. Use caution when operating the dome to prevent clothing (particularly sleeves, neckties, etc.), hair, or accessories from being drawn into the machine, otherwise injury may result. In the event that an object is drawn into the machine, immediately disconnect the machine from the power source.
- Make sure you do not misjudge in lifting parts of the machine.
  Lifting heavy parts could cause backache or other injuries.
- Make sure the machine is installed correctly. For questions or comments contact your FigureBelle dealer or FigureBelle Customer Service.

### Connecting the machine safely

## WARNING



There are high-voltage electrodes inside the machine. Before you access the inside of the machine, including for routine maintenance such as cleaning, make sure you have unplugged the power cord from the electrical socket.

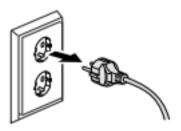



DO NOT handle the plug with wet hands. Doing this might cause an electrical shock.





Always make sure the plug is fully inserted. Otherwise, an electrical shock or an fire might be caused at the end.



This machine should be connected to an adjacent grounded AC power source within the range indicated on the rating label. DO NOT connect it to a DC power source or inverter. Doing this might cause an electrical shock. If you are not sure what kind of power source you have, contact a qualified electrician.



This machine is equipped with a 3-wire grounded plug. This plug will only fit into a grounded power outlet. This is a safety feature. If you are unable to insert the plug into the outlet, call your electrician to replace your obsolete outlet. DO NOT use the supplied grounded plug in any other outlet except those specified, doing this may cause an electrical shock.





DO NOT use the machine if the power cord is frayed or damaged, doing so may cause an electrical shock or a fire.





DO NOT pull on the middle of the AC power cord. DO NOT allow anything to rest on the power cord. DO NOT place this machine where people can walk on the cord. Doing this might cause an electrical shock or a fire.





FigureBelle strongly recommends that you DO NOT use any type of extension cord. Failure to observe these precautions could cause fire, electric shock, or damage to the machine.

### Servicing the machine

DO NOT attempt to service this machine yourself, unless otherwise specified. Opening or removing covers may expose you to dangerous voltages and other risks, and may void your warranty. Call your FigureBelle dealer or FigureBelle Customer Service



## WARNING





If the machine casing has been damaged, there may be the possibility of an electric shock or a fire. Unplug the machine from the power socket and call your FigureBelle dealer or FigureBelle Customer Service.

#### CAUTION

If the machine becomes unusually hot, releases smoke, generates any strong smells, or if you accidentally spill any liquid on it, immediately unplug the machine from the electrical socket. Call your FigureBelle dealer or FigureBelle Customer Service.



# IMPORTANT

If the machine does not operate normally when the operating instructions are followed, adjust only those controls that are covered by the operating instructions. Incorrect adjustment of other controls may result in damage, and will often require extensive work by a qualified technician to restore the machine to normal operation.

### **Product Warranty & Liability**

Nothing in this guide shall affect any existing product warranty or be construed as granting any additional product warranty. Failure to follow the safety instructions in this guide may invalidate your product's warranty.

## **A** WARNING

- DO NOT use this machine near all liquids, for example, near a bath tub, wash bowl, kitchen sink or washing machine, in a wet basement or near a swimming pool.
- Avoid using this machine during an electrical storm. There may be a remote risk of an electrical shock from lightning.
- · Use only the power cord supplied with this machine.
- This product must be installed near an electrical socket that is easily accessible. In case of an emergency, you must unplug the power cord from the electrical socket to shut off the power completely.

#### **Declaration of Conformity (Europe only)**

We, FigureBelle, SA Jeurissenlaan 1033, 3520 Zonhoven, Belgium declare that this product is in compliance with 89/336/EEC (EMC Directive) amended by 92/31/EC and 73/23/EEC (Low Voltage Directive) both amended by the CE-marking directive 93/68/EEC



EMC EN55022 : 1998 +A1:2000


EN55024: 1998 + A1:2001

Safety EN60950 : 2006

The Declaration of Conformity (DoC) is available on request.

#### **Recycling information**

In accordance with the WEEE (2002/96/EC) and Battery (2006/66/EC) Directives

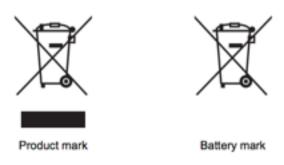

**European Union only** 

The product/battery is marked with one of the above recycling symbols. It indicates that at the end of the life of the product/battery, you should dispose of it separately at an appropriate collection point and not place it in the normal domestic waste stream.

#### **Trademarks**

The FigureBelle logo is a trademark of Soft Tronics, byba. The productlabels FiguraMax, PeauMax and TailleMax are trade names of Soft Tronics byba

Any trade names and product names of companies appearing on FigureBelle products, related documents and any other materials are all trademarks or registered trademarks of those respective companies.

#### **Licensing Remarks**

This product is free of any license.



**Product Safety Guide** 

